




SIKKY BMW E30 LS2 COIL RELOCATION BRACKET

GUIDE


****LS2 coil bracket is required for use with our hydrobooster****



1- First we suggest cutting out the guide and punching the holes accordingly.

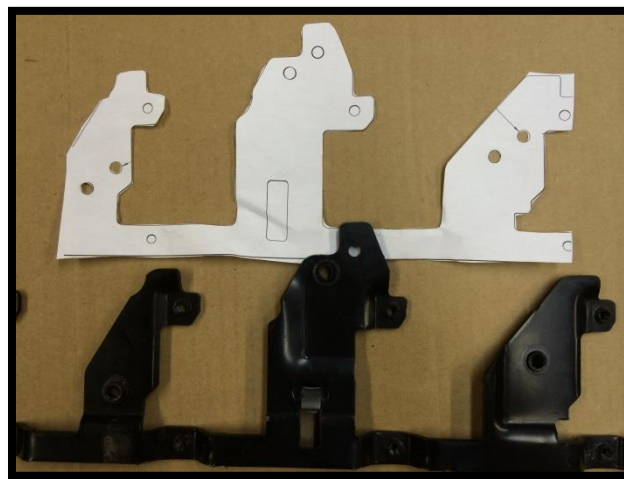

2- Stick two factory bolts through the original holes to keep the guide in place.

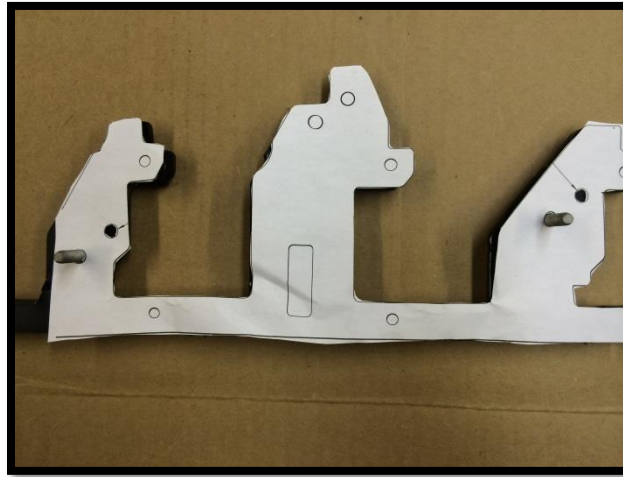

3- Using a ¼" drill bit, drill the holes out accordingly.



4- Now you're all set to reinstall using your new hole locations.

