



(8) Subframe spacers are supplied with the Sikky FRS/86/BRZ Mount Kit. These spacers are used on the (8) factory bolts that are called out in the pictures below.

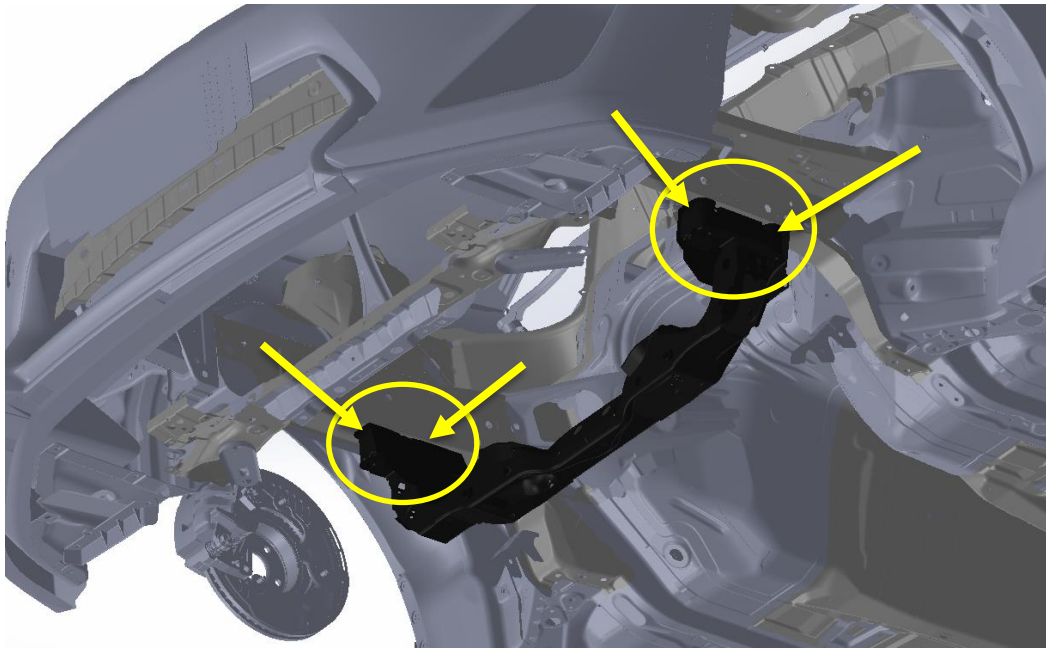

(2) Spacers go in between the front subframe and the unibody of the chassis on each side

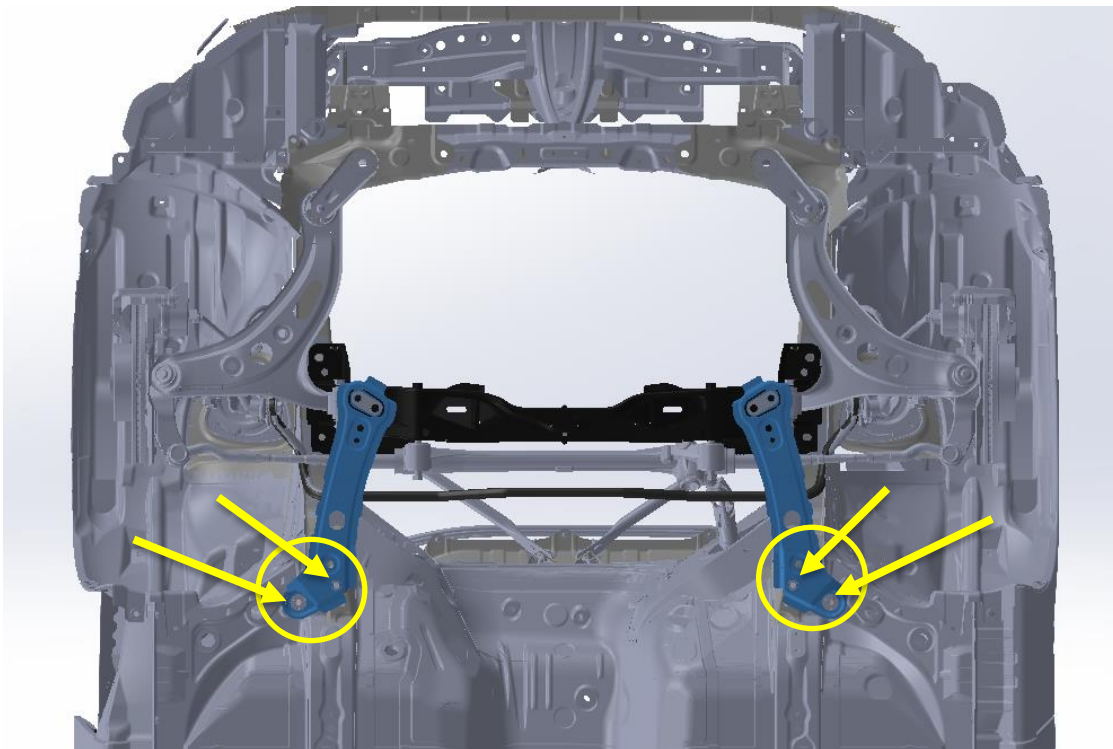

(2) Spacers go in between the front sway bar mount brackets and the unibody of the chassis on each side