



(4) Subframe spacers are supplied with the Sikky FRS/86/BRZ Mount Kit.
These spacers (shown in red) are used in the positions shown below

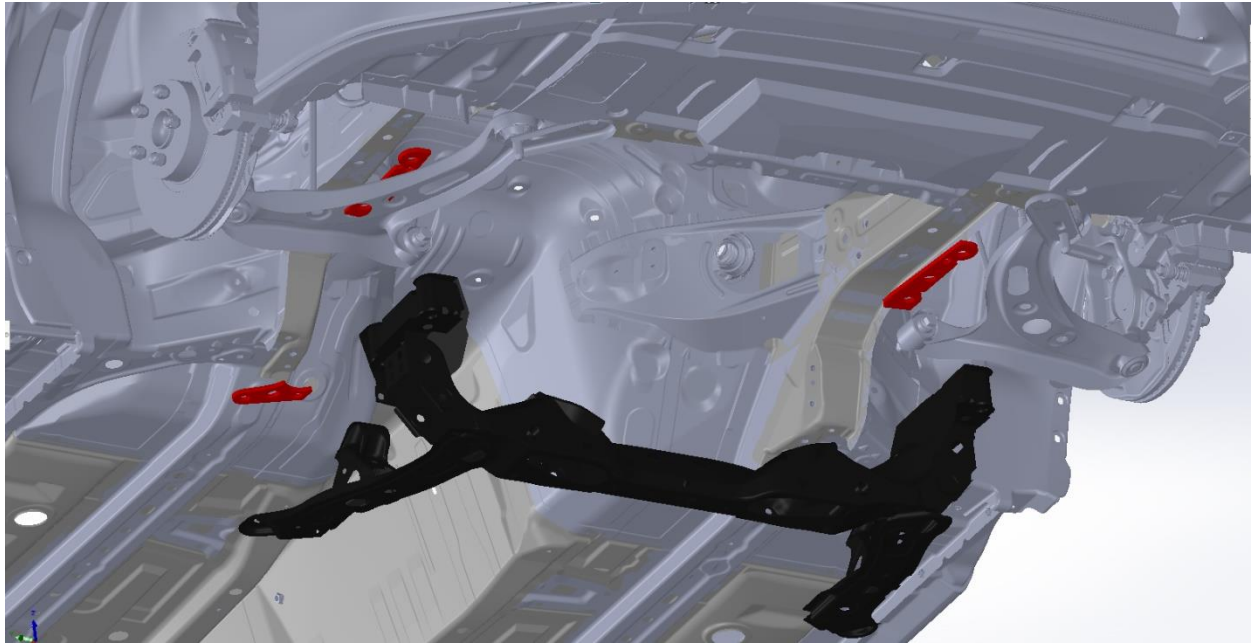

(1) Spacer goes in between the front subframe and the unibody of the chassis on each side

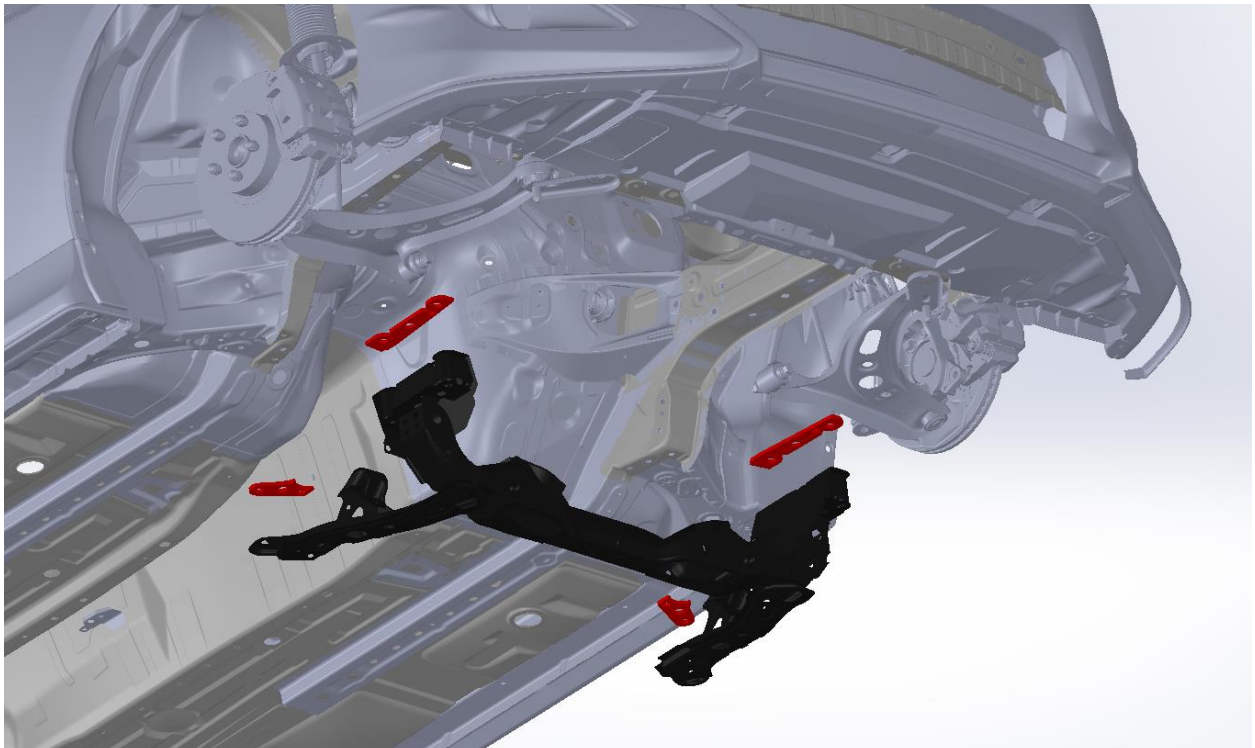

(1) Spacer goes in between the front sway bar mount brackets and the unibody of the chassis on each side

